


Installing the Remora CBX

Install the Remora CBX by placing the Matrice Drone On its side.



Click the CBX to the rear framework at the front bottom of the drone.

Connect the cable to the CBX connector on the Gimble2 side of the drone (Starboard side)
(You should hear a click when it is connected properly)

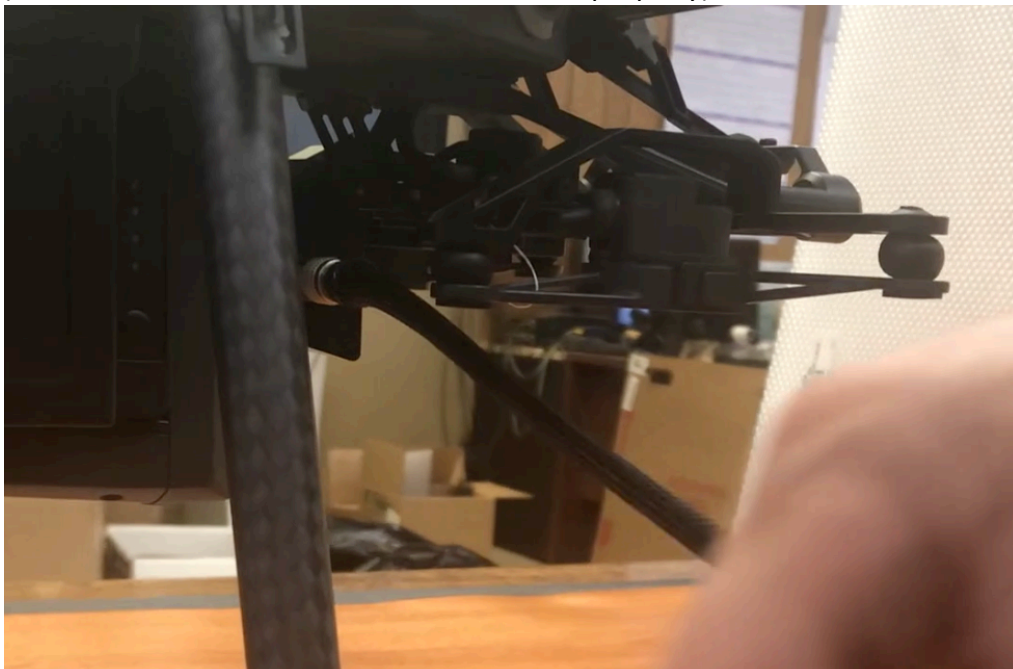

Pass the cable around to the back to the rear connection panel of the drone.



The Yellow Connector will connect to the Yellow Drone Receptor as depicted.

The second connector needs to show the red "+" up and connect to the right most pins when looking at it from the rear



Add the optional weathercap protector on the rear.



The final piece is adding the cable clip to support and hold the cable in place

